

control (18).

I-11 FORCE FEED LUBRICATOR OPERATION

- a. Check the oil level in the force feed lubricator sight gauge (83, Figure 1- 2 and add oil if necessary.
- b. Move the force feed lubricator switch (49) to the ON position, and check to see that the green indicator light (50) illuminates.
- c. Open the force feed lubrication shutoff valve (33).

I-12. FOAM INJECTION OPERATION

- a. Remove the cover from the foam injector housing.
- b. Remove the foam injector suction hose from the foam injector housing. Connect the hose to the foam injector, and submerge the opposite end, with foot valve attached, in the foam container.
- c. Reinstall the cover on the foam injector housing.
- d. Move the foam injector switch (51, Figure 1 -2 to the ON position, and check to see that the green indicator light (52) illuminates.

I-13. HOISTING AND AUXILIARY DRUM OPERATION

- a. Position controls as indicated in paragraph I-2.
- b. Position the auxiliary transmission shift levers (65, Figure 1-2 to the desired positions.
- c. Refer to paragraph I-2 and start and operate the engine.
- d. Engage the power take-off.
- e. Release the hoisting or auxiliary drum brake control lever (30 or 31) for the drum selected for operation.
- f. Operate the auxiliary and hoist drum clutch control lever (11) to spool cable onto the drum.
- g. Release the clutch control lever (11) to stop rotation of the drum, and free the drum for spooling cable off the drum.

I-14. 3rd DRUM OPERATION

- a. Position controls as indicated in paragraph I-2.