

- b. Position the auxiliary transmission shift levers (65, Figure 1-2) to the desired positions.
- c. Refer to paragraph 1-2. and start and operate engine.
- d. Engage the power take-off control lever (58).
- e. Release the 3rd drum brake control lever (29).
- f. Operate the 3rd drum clutch control lever (10) to spool cable onto the drum.
- g. Release the clutch control lever (10) to stop rotation of the drum, and free the drum for spooling cable off the drum.

1-15. CATHEAD OPERATION

- a. Position the controls as indicated in paragraph 1-2.
- b. Position the auxiliary transmission shift levers (65, Figure 1-2) to the desired positions.
- c. Refer to paragraph 1-2 and start and operate the engine.
- d. Engage the power take-off control lever (58).

WARNING

Improper use of the cathead will render it an extremely dangerous piece of equipment. Serious injury can result from inattentiveness when using it. Keep hands well clear of the cathead when using the catline. Never use a frayed catline. Never throw the catline around the cathead. Always feed the catline onto the cathead slowly from the side. Always grip the catline lightly so that it can be released quickly if it should foul.

- e. Move the cathead transmission control lever (75) to the desired position.
- f. Use the cathead control lever (4) to operate the cathead.

1-16. ROTARY TABLE OPERATION

- a. Position the controls as indicated in paragraph 1-2.
- b. Position the auxiliary transmission shift levers (65, Figure 1-2) to the desired positions.
- c. Refer to paragraph 1-2 and start and operate the engine.